



# MultiPad PMP7100D3G

Tablet PC

## User Manual

## Common information

Dear Customer. Thank you for choosing Prestigio MultiPad PMP7100D3G Tablet PC. Before starting to use the tablet, please read this manual carefully to discover all its features. Please save this manual and refer to it in the future if you have questions concerning your device.

This manual contains safety information, technical specifications of Prestigio MultiPad PMP7100D3G Tablet PC, preinstalled software basic features and other useful information, which will help you to improve your use of the device, Android operating system and applications.

For information about meaning of the terms used in this manual, please refer to the "Glossary" section at the end of this manual, as well as to other open information sources or Prestigio customer support line.

## Disclaimer.

As the Prestigio products are constantly updated and improved, your device's software may have a slightly different appearance or modified functionality than presented in this User Manual. We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.

## Important Safety Instructions

Your Prestigio MultiPad PMP7100D3G Tablet PC is manufactured and designed for mobile using.

Please, read the following instructions carefully. It helps you to proper use your device without risk for someone's safety and keep your Tablet PC in good working condition as long as it possible.

## General instructions

1. Do not place objects on top of the MultiPad as objects may scratch the screen.
2. MultiPad should be kept away from extreme changes of temperature.
3. Protect it from direct sunlight or heat sources.
4. Protect the device from moisture and from dusty or smoky environment as it can harm the tablet.
5. Keep your MultiPad away from contact with active chemicals.
6. Do not place the MultiPad on an uneven or unstable surface. Fall of the device can cause damage to the LCD screen which is not covered with warranty.
7. Do not expose the MultiPad to strong magnetic or electrical field.
8. Protect your MultiPad from hits and extreme pressure.
9. Operation Temperature: This MultiPad should only be used in environments with ambient temperatures between 5°C (41°F) and 35°C(95°F).
10. Do not insert into MultiPad devices or items not matching to standard sockets on it.
11. Do not use MultiPad in the rain - it is NOT a waterproof device. Protect the Multipad from dust, dirt and high humidity.
12. Do not use Your MultiPad during driving.
13. Use only manufacturer approved chargers. Using non-original chargers may cause damage of the device and be harmful to your health.
14. The MultiPad and the adapter may produce some heat during normal operation or charging. Avoid placing it to the soft surfaces, other places and conditions which may prevent normal dispersion of the heat, causing device overheating. Do not leave the MultiPad on your lap or other part of the body to prevent discomfort or injury from heat exposure.
15. Disconnect the MultiPad from an electrical outlet after it is charged.
16. Do not use a pen or any sharp object to tap the screen. Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.
17. DO NOT disassemble the MultiPad, only a Prestigio certified service technician should perform repair.
18. Always power off the MultiPad to install or remove external devices that does not support hot-plug.
29. Your MultiPad must be switched off during airplane take-off and landing.

## Warranty Information

Warranty information could be found at [www.prestigio.com/service](http://www.prestigio.com/service). Prestigio MultiPad PMP7100D3G Tablet PC life cycle is 2 years.

# Contents

## **1. Product Overview**

- 1.1 Package Contents
- 1.2 Device Overview

## **2. Getting Started**

- 2.1 Charging the battery
- 2.2 Using the storage card
- 2.3 Hot plug of storage card
- 2.4 Memory space
- 2.5 Power on/off and Device Reset
- 2.6 Connect to wireless networks (Wi-Fi)
- 2.7 Inserting a SIM card

## **3. Home Screen**

- 3.1 Status and notifications
- 3.2 Shortcuts to Add widgets
- 3.3 Finger gestures
- 3.4 Copying files to and from the storage card
- 3.5 Searching the device and the web

## **4. Personalizing**

- 4.1 Change the Notification ringtone
- 4.2 Change your wallpaper
- 4.3 Personalize your Home screen with folders
- 4.4 Rearrange widgets and shortcuts on your Home screen

## **5. Web browsing**

## **6. Manage Applications**

## **7. Typical applications introduction**

- 7.1 Music Player
- 7.2 Video Player
- 7.3 Gallery
- 7.4 File Manager
- 7.5 Instant Messaging tools
- 7.6 E-mails
- 7.7 Camera

## **8. Prestigio preinstalled applications**

## **9. Settings**

- 9.1 Wireless & networks
- 9.2 Sound
- 9.3 Display
- 9.4 HDMI Settings
- 9.5 Storage
- 9.6 Apps
- 9.7 Accounts & Sync
- 9.8 Location service
- 9.9 Security settings
- 9.10 Language & input setting
- 9.11 Backup & reset
- 9.12 Date & Time setting
- 9.13 Accessibility
- 9.14 Developer options
- 9.15 About tablet

## **10. Troubleshooting**

- 10.1 Force shutdown
- 10.2 Restore default settings
- 10.3 System updating

## **11. Glossary**

# 1. Product Overview

 
# 1

## 1.1 Package Content:

Prestigio MultiPad PMP7100D3G Tablet PC – 1x  
Carrying Case – 1x  
Quick Start Guide – 1x  
Legal and Safety Notices – 1x  
AC Adapter – 1x  
USB Cable – 1x  
Warranty Card – 1x  
OTG cable – 1x

## 1.2 Device Overview

### Control Buttons and Connectivity:

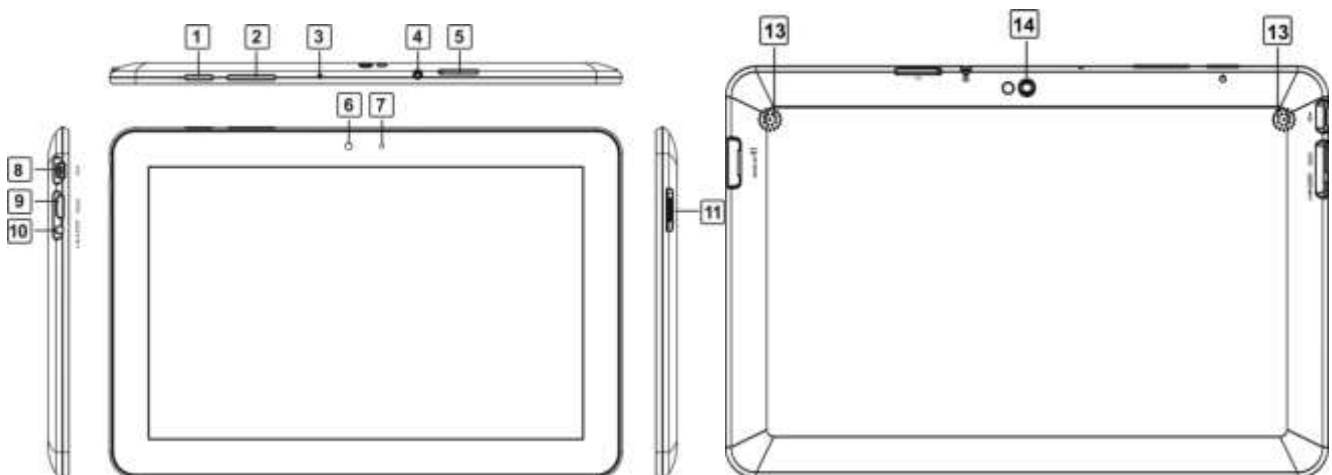

1	<b>Power Button</b>	Turn on/off the device; Suspend/Activate the device
2	<b>Vol+ \Vol-</b>	Adjust the volume level
3	<b>Microphone</b>	To record voice
4	<b>Earphone Jack</b>	Earphones connection
5	<b>SIM Card slot</b>	Insert a SIM card for 3G connection
6	<b>Front Camera</b>	Take photos or video chat
7	<b>Light Sensor</b>	Adjusts the display brightness

8	<b>Mini USB port</b>	USB connection
9	<b>HDMI port</b>	Back to Home screen
10	<b>DC port</b>	Power adapter connection
11	<b>Micro SD card slot</b>	Insert the Micro SD card
12	<b>Front Camera</b>	Take photos or video chat
13	<b>Speakers</b>	Stereo Speakers
14	<b>Rear Camera</b>	Take photos

## Technical Specifications:

Processor	
CPU	ARM Cortex A9 (Rockchip 3066)
CPU Internal Clock Rate	1.6 GHz
Display	
Display Size	10.1'
Display Resolution	1280x800
Display Technology	TFT LCD
Display Features	Capacitive multi touch screen
Screen rotation	4 way G-Sensor
Memory	
Internal Memory Size	16 GB
Installed RAM Storage Capacity	1 GB DDR3
Flash Card	External Micro SDHC up to 32GB
Interfaces	
Interface ports available	Micro SD, USB 2.0, Wi-Fi, Mini HDMI
Interface Wi-Fi	IEEE 802.11b/g/n
Interface Bluetooth	Yes
Interface USB	1 x mini USB
Interface HDMI	1 x mini HDMI
Interface Audio	1 x 3.5 mm mini jack
Supported 3G protocols	HSDPA
Multimedia	
Digital Camera	Back : 2 Mpixel, Front : 0.3 Mpixel
Supported eBook Formats	PDF, FB2
Supported Audio Formats	MP1, MP2, MP3, WMA7, WMA8, WMA9, WAV, APE, OGG, OGA, FLAC, AAC, M4A
Supported Picture Formats	PNG, BMP, GIF, JPG
Supported Video Formats	1080P@60 fps & H.264/MVC/VP8 encoder by 1080P@30fps
Video Features	Video Playback
Sound Features	Stereo Audio Playback
Software	
Operating System	Android 4.0.4
Battery	
Battery Technology	Lithium Polymer
Battery Current Capacity	6400 mAh
Battery Video playback Time	Up to 6.5hr
Battery Audio playback Time	Up to 36hr
Battery Standby Time	Up to 120hr
Miscellaneous	
Built-in Devices	3G Modem, Card Reader, Microphone, Speakers,
Included Accessories	USB Cable, OTG-cable, Pouch, Power Adapter
System Requirements	Microsoft Windows 7, Microsoft Windows Vista, Microsoft Windows XP, Apple Mac OS 10.6 or Later, Linux 2.6
Applications Installed	Adobe Flash, Office Suite, eReader Prestigio, Skype, Google Play
Warranty	
Warranty Term (month)	24 month
Temperature and Humidity	
Storage Temperature	0°C (32°F) ~ +50°C (122°F)
Operation Temperature	5°C (41°F) ~ +35°C (95°F)
Storage Relative Humidity	0% ~ 90%, Non-Condensed
Operating Relative Humidity	0% ~ 90%, Non-Condensed

## 2. Getting Started

# 2

### 2.1 Charging the battery

Prestigio MultiPad comes with a built-in polymer rechargeable battery and is designed to use only manufacture-specified original batteries and accessories. You can see battery status on status bar of MultiPad in the lower right corner of the home screen. Android OS has battery charge detection system and notify user if battery charge is low and device need to be connected to AC adapter. If you will see such message, or your device couldn't power on, connect original AC power adapter to charge your device. Plug one end of the adapter into the power jack of the device, and the other to the power socket. To extend the battery operation life, wait for finish of charge process.

Please, fully charge your new device after unpacking.

**[Note]:** it is normal if the device is warm or hot during charging, you can use it as usual, just follow the respective security precautions.

### 2.2 Using the storage card

Your new Prestigio MultiPad PMP7100D3G Tablet PC is equipped with Micro SD card slot to extend available device memory. It is compatible with Micro SD/ Micro SDHC/ TF-Flash card formats of size up to 32Gb. Proper functioning of larger capacity cards is not guaranteed.

#### Insert the storage card

The storage card slot is on the left side of the back panel of device. To insert a card, place the card as shown on the picture (left) and press it in card slot until click. Card must be inserted effortlessly. DO NOT push the card too strong, it could damage the card slot or storage card.



#### Browse files in the storage card

To browse the files you should do one of the following:

- Select "Explorer" icon to view files in the storage card;
- You can also install and run any other third party file browser applications.

#### Remove the storage card

To avoid data loss or damage, please stop using files/programs in the storage card, and then tap **Settings> Storage> Unmount SD card** to remove it safely.

To remove the storage card, gently press the edge of the card to release the safety lock and pull the card out of the slot.

**[Note]:**

1. Make sure the location and direction of the storage card is correct when inserting.
2. To avoid possible issues or incompatibility of the storage card with your MultiPad, major brands of storage card are recommended.

## 2.3 Hot plug of storage card

**Please do not hot plug the storage card when using or browsing its files.**

For example, when you are running the Music/Video Player/ Gallery, the storage card could be damaged and files on it might become corrupt if you take out the storage card without proper preparation. As for details of inserting/removing storage card, see **2.2 Use the storage card**.

## 2.4 Memory space

The capacity of built-in flash chip is 16GB. The device contains 2 memory partitions: Internal storage & NAND Flash storage. The space is partitioned to store apps, setting and user data. A part of storage will be reserved for system resources and wouldn't be available for user. The exact size of available memory may vary depending on Firmware version.

 
MultiPad supports extended storage – micro SD cards of 32GB maximum capacity.

## 2.5 Power on/off and Device Reset


1. **Power on:** press down the Power Button and hold it for a while to turn on the device when the battery is full enough.
2. **Power off:** press down the Power Button and hold it for about 3 seconds and then select **Power Off** in popup menu to turn off the device.
3. **Screen Lock:** short-press down the Power Button once to shutdown the screen to save battery life. Short-press down the Power Button again to activate the lock screen. After unlocking, the device will resume the screen before locking.
4. **Reset:** Press the power button for about 8 seconds to perform forced reset of device.

## 2.6 Connect to wireless networks (Wi-Fi)

To connect to a Wi-Fi wireless network, you should follow:

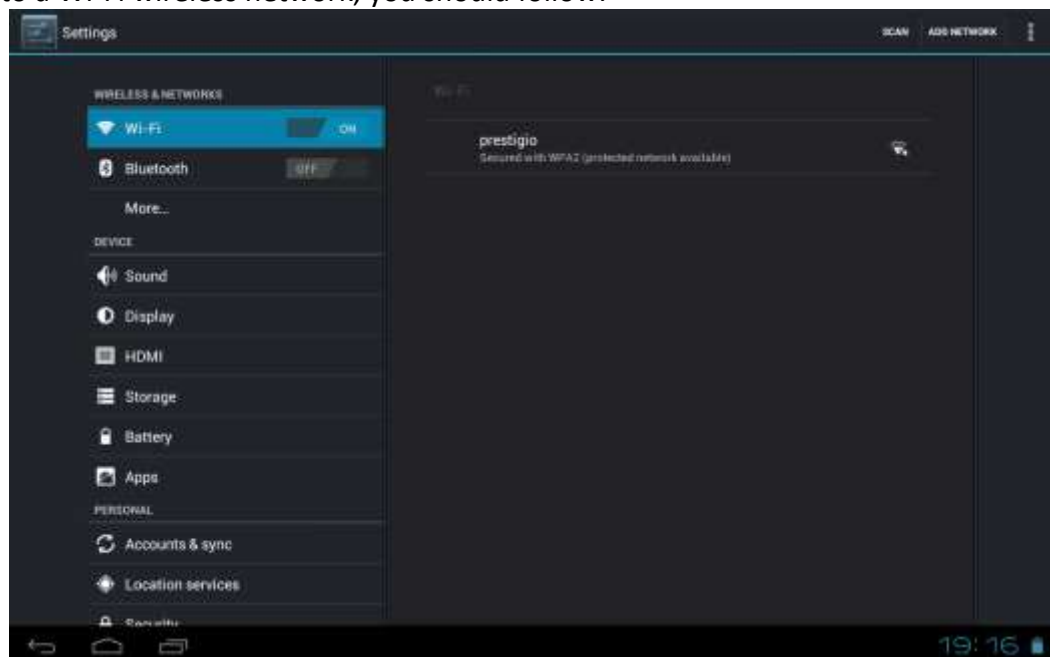


1. Tap **Settings** on the Home screen or go to the **Settings** in other way (via Notification bar or Application list);

2. Turn **Wi-Fi** switch on in **Wireless & Networks** section;
  3. The network names and security settings of detected Wi-Fi networks are displayed in the Wi-Fi networks section;
  4. Tap a Wi-Fi network to connect. If you select an open network, you will be automatically connected to the network. If you select a secure protected network, enter the Password and then tap **Connect**.
- Depending on the network type and its security settings, you may also need to enter more information or choose a security certificate.
5. After successful connection, the Wi-Fi connected icon  will appear on the status bar.

## 2.7 Inserting a SIM Card

 The MultiPad is equipped with the SIM card slot which allows you to insert the SIM card into the unit as shown below:

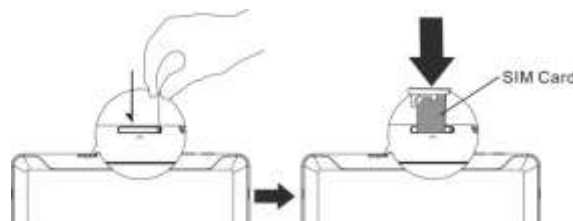

Use steel wire to poke the hole on the SIM card port to popup the SIM card base.

Place the SIM card on the card base and insert them into the SIM card port.

**[Note]:** 3G module does not support hot plug-in of SIM card. You have to switch the MultiPad off completely, install SIM card as described above and switch the MultiPad on.



# 3. Home Screen

## 3

The Home screen is your starting point to access all the features on your device. It displays application icons, widgets, shortcuts, and other features. You can customize the Home screen with different wallpaper & widgets and display items you want. See the **Personalizing** section in this manual. When you start, the Home screen appears.



### Sleep mode



Sleep mode suspends your device to a low power state while the display is off in order to save battery power. You will still be able to receive messages while the device is in Sleep mode.

**[Note]:** By default the device enters sleep mode automatically in case it's not operated for 2 minutes. You may change this time or even disable automatic sleep mode activation in menu **Settings-Device-Display-Sleep**.

### Wake up from sleep mode

To wake up your device manually, press the Power Button. You will see a Lock Screen then.


### Unlocking the screen

Touch the lock icon , hold it and slide towards unlock icon on the screen. 

Other unlock ways, like PIN code, Face Unlock, Pattern etc. could be set up by user in menu **Settings-Personal-Security-Screen Security – Screen Unlock**.

## Browse Home Screen


















You can go to the extended Home screen by sliding your finger horizontally across the screen to go to the left or right side

of the Home screen. Tap the icon  to view all applications on your device.

### 3.1 Status and notifications

#### Status and Notification Icons may appear.

The status bar contains different information like time and date, battery status, wireless networks status, active notifications from Android OS or installed applications and so on. When an application is running, corresponding notification icon will appear in the notification area. Icons you may often see are listed as follows:

Status icons and its meanings	
	Tap to go to the Home screen
	Back
	Recently applications view
	Menu icon
	Android debug bridge enabled
	Connected to a Wi-Fi network and display the signal strength
	Connected to 2G/3G mobile network
	Bluetooth status icon
	Battery status
	
Notification icons its meanings	
	New Gmail (Google Mail) message
	New Email message
	Music player is ongoing
	SD card is mounted
	USB Connected
	Airplane mode
	Settings

## Open notification panel

When a new notification icon displays in the status bar, touch and hold the status bar, then slide your finger upwards to open the Notifications panel as follows:



If you have several notifications, you can scroll down the screen to view more notifications.

In the notification panel, there are toggles for turning on/off **Auto-rotate screen** option and **Notifications**, and shortcuts for quick access to **Settings** and **Wi-Fi** tabs.

## Close the Notifications panel


Simply touch the Back button on the device panel.

 
## 3.2 Shortcuts to Add widgets

Widgets put at-a-glance important information and media content up front on your Home screen. Some widgets are already added to your Home screen for your convenience. You can add more from the available selection of widgets, or download more widgets.

### 1. Adding a widget to your Home screen

To add widgets to Home screen, you can:

1.1 Tap  on the home screen to enter into all apps interface as follows

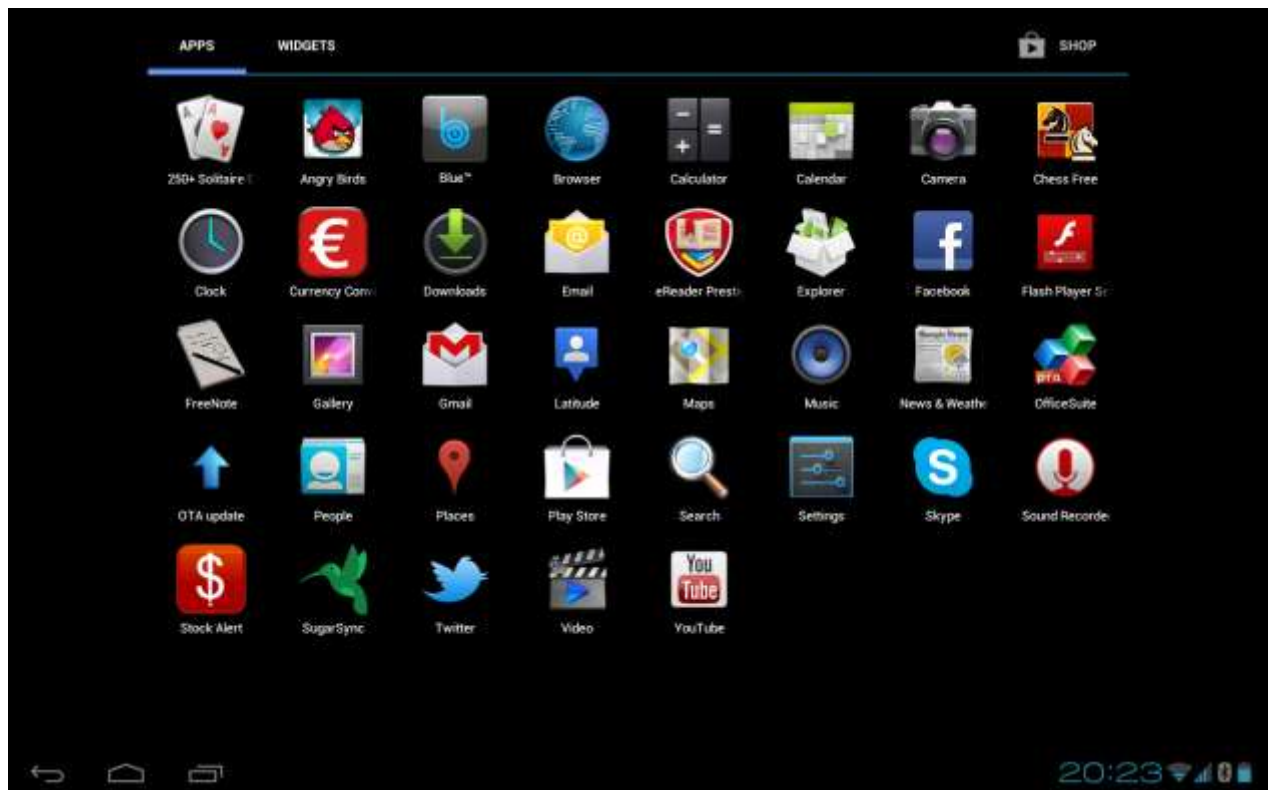


1.2 Tap **WIDGETS**

1.3. Select one item. Touch and hold your finger on widget. Choose desired place for widget on the home screen.

**[Note]:** When choosing place for widget you can switch home screen tabs by sliding finger with holding widget to the left or right side of the home screen.

 Examples of Widgets are as follows:

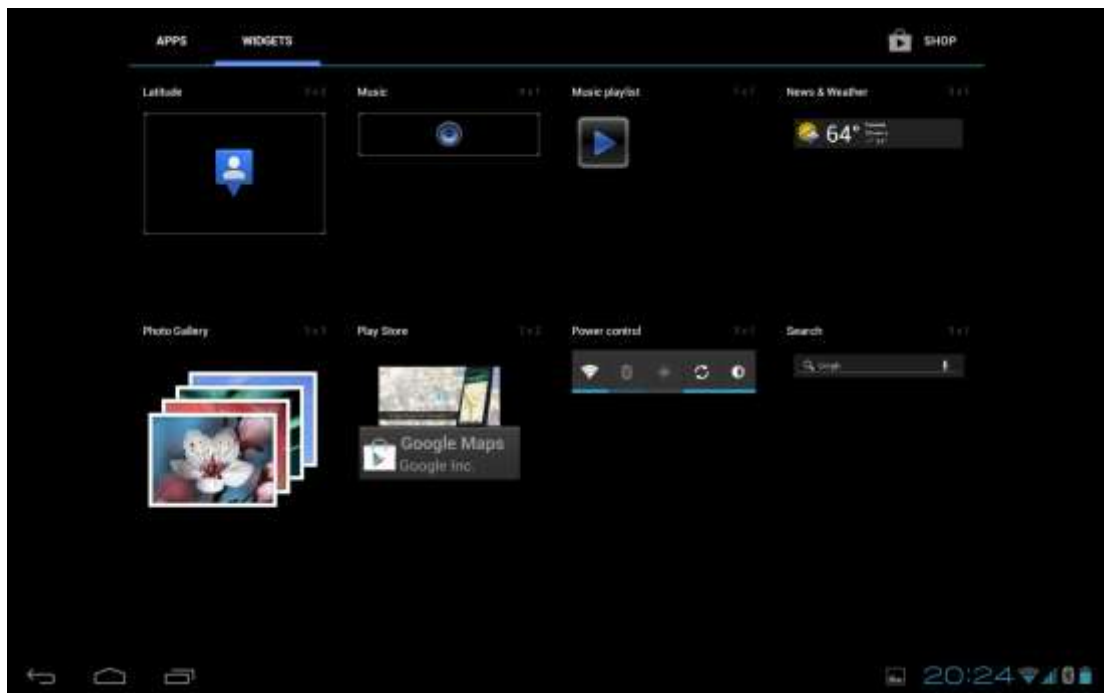

## 2. Removing widget from your Home screen

To remove a widget, touch and hold the widget until the icon “X Remove” or “X” appears at the top of the screen, drag the widget onto it, so the widget you want to remove has become red and release your finger.

## 3.3 Finger gestures

**Tap:** When you want to type using the keyboard, select items onscreen such as application and settings icons, or touch onscreen buttons, simply tap them with your finger.

**Touch and hold:** To open the available option for an item (e.g. contact or link in a web page), simply touch and hold the item.

**Swipe or slide:** To swipe or slide means to drag your finger vertically or horizontally across the screen.

**Drag:** Touch the object before you start to drag. While dragging, do not release your finger until you have reached the target position.


**Rotate:** For most screens, you can automatically change the screen orientation from portrait to landscape by turning the device sideways. When entering text, you can turn the device sideways to bring up a bigger keyboard. Refer to Settings chapter for more details.

 
### 3.4 Coping files to and from the storage card


You can copy music, photos/pictures and others to MultiPad to personalize your device.

1. Use the USB cable that came with your device to connect it to an USB port on your computer.



2. When the icon  appears in the notification area, open the notification panel and tap **USB Connected** to popup the following screen:

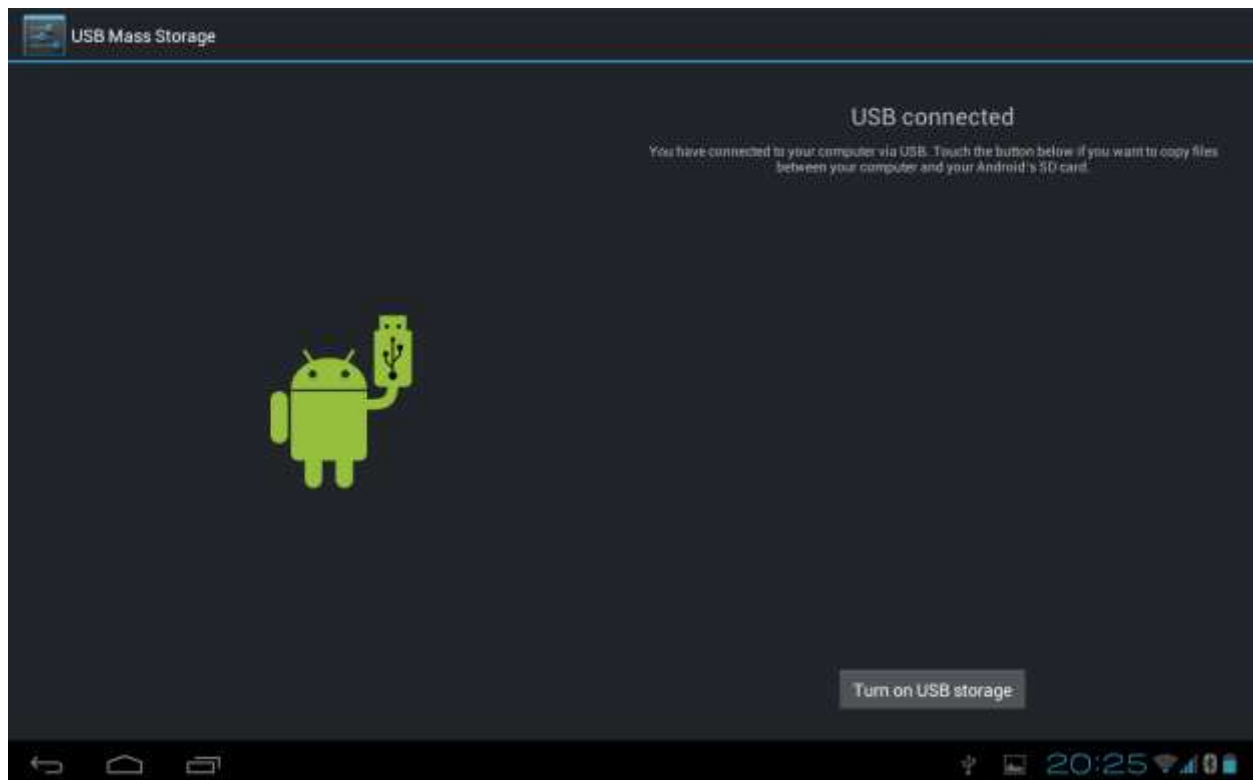

3. Tap **Turn on USB storage**, read popup notice, tap “OK” and when the notification icon  turns yellow, the computer will recognize your device as a removable disk;
4. Find the removable disk and open it. Do one of the followings:
  - Copy the files from the computer to the storage card's root folder.
  - Copy the files from the storage card to a folder in your computer or computer desktop.
5. After copying the files, you may turn USB off. To do this, if you would like to keep your device connected to the computer and enable reading its storage card from Android, you can open the Notifications panel and tap **Turn off USB storage**. Otherwise, if you would like to disconnect the device physically from computer, please unmount the removable disk (that is, your device) as required by your computer's operating system to safely remove your device.
6. Disconnect your device from the computer.


### 3.5 Searching the device and the web

You can search information in your device and in the Web by using the Quick Search Box. It's placed on the top left side of the Home Screen:





Tap the magnifying lens, and enter the search item into the Quick Search box.

You may use also the following way:

1. Touch  on the home screen to enter into all apps interface;
2. Tap **Search** and then enter the search item in the Quick Search Box

As you type, matching items on your device and suggestions from Google web search are shown as a list. The suggested items that appear will depend on the options that you have selected in the search settings.

3. Do one of the following:

- If what you're searching for is in the list of suggestions, tap it in the list. The item opens in the appropriate application.
- If what you're searching for is not in the list, tap  to open the search settings menu. Tap Web and then tap Back  and Enter to search the Web. The web browser opens, displaying results of a Google search on the Web.



## 4. Personalizing

# 4

### 4.1 Change the Notification ringtone

Choose from the available selections of notification ringtones on your device. You can also download or copy notification ringtones or songs to your device's storage card and choose one to use as your notification ringtone. To find out how you can copy files to your storage card, see “Copying files to and from the storage card”.

1. In the Home screen, tap Settings > Sound > Default notification.
2. Tap the notification ringtone you want to use. The notification ringtone briefly plays when selected.
3. Tap **OK**.

### 4.2 Change your wallpaper

Personalizing your Home screen wallpaper with your favorite photo is a quick and easy way to change the feel of your device and give it a fresh look. Browse the collection of wallpapers included in your device or choose from photos that you have taken with the camera.

To change your Home screen or lock screen wallpaper:

1. On the Home screen touch and hold your finger at the free area. **Choose wallpaper from** menu will appear.

**[Note]:** You can also tap  > Settings > Display > Wallpaper to reach **Choose wallpaper from** menu.

2. Choose source and wallpaper you would like to use.

You can do one of the following:

- Tap **Gallery** to select a photo/picture that you have taken using the camera or copied to your storage card. Tap **Crop** to crop the photo/picture and set the cropped picture as wallpaper.
- Tap **Wallpaper** gallery to choose from preset wallpapers and then tap **Set wallpaper**.
- Tap **Live Wallpaper** gallery to choose from preset live wallpapers and then tap **Set wallpaper**.

### 4.3 Personalize your Home screen with folders

Use folders to group related applications and other shortcuts to keep your Home screen tidy and organized.

#### 4.3.1. Adding folders on your Home screen

Touch and hold the application shortcut and drag it onto another shortcut to create a folder for the applications you want to file together, and then release your finger to finish creating a folder. You can drag any other application shortcut into the new folder.

**To rename a folder:**

1. Tap the folder to open it.
2. Tap **Unnamed Folder** to prompt the keyboard.
3. Enter a new folder name and then tap Enter key.



### 4.3.2. Removing folders from Your Home screen

Tap the folder you want to remove to open it. One by one touch and hold application shortcut inside folder and drag it out of the folder. When only one application shortcut will stay inside the folder, folder will be automatically deleted.

**[Note]:** During operations with folders your application shortcuts are not removed.

## 4.4 Rearrange widgets and shortcuts on your Home screen

Rearrange widgets and shortcuts on your Home screen to get space for adding more items to the Home screen.

### 4.4.1. Moving a widget or shortcut

1. Gently tap and hold the widget or shortcut you want to move.  
You'll see a blue edging around the widget or shortcut. Don't release your finger.
2. Drag the widget or shortcut to a new location on the screen.  
Pause at the left or right edge of the screen to drag the widget or shortcut onto another Home screen panel.
3. When the widget or shortcut is where you want it, release your finger.  
If you've released your finger but a message shows that there's no space to place the widget or shortcut, drag it right or left again to another Home screen panel.

### 4.4.2. Removing shortcuts

To remove a shortcut, touch and hold the shortcut until the icon "X Remove" or "X" appears at the top of the screen, drag the shortcut onto it so the shortcut you want to remove has become red and release your finger.

## 5. Web browsing

# 5


User can connect to the network via the browser.



Tap the browser icon on the Home screen to open it as follows:



Use keyboard to type URL (web-site address) or search phrase at the address bar.



To exit browser application just tap Back button .

 
# 6. Manage Applications

## 6

You can personalize and enrich your MultiPad by installing a wide variety of free and paid apps ranging from productivity apps, entertainment, to games. When you find a program you want, you can easily download and install it on your MultiPad with just a few steps as follows:

### How to install Android programs

1. Tap  at the Home screen to enter into all apps interface. Run **Play Store** application .
2. Find program you'd like to install. It can be free or paid program.
3. Use Play Store interface to install program to your device.

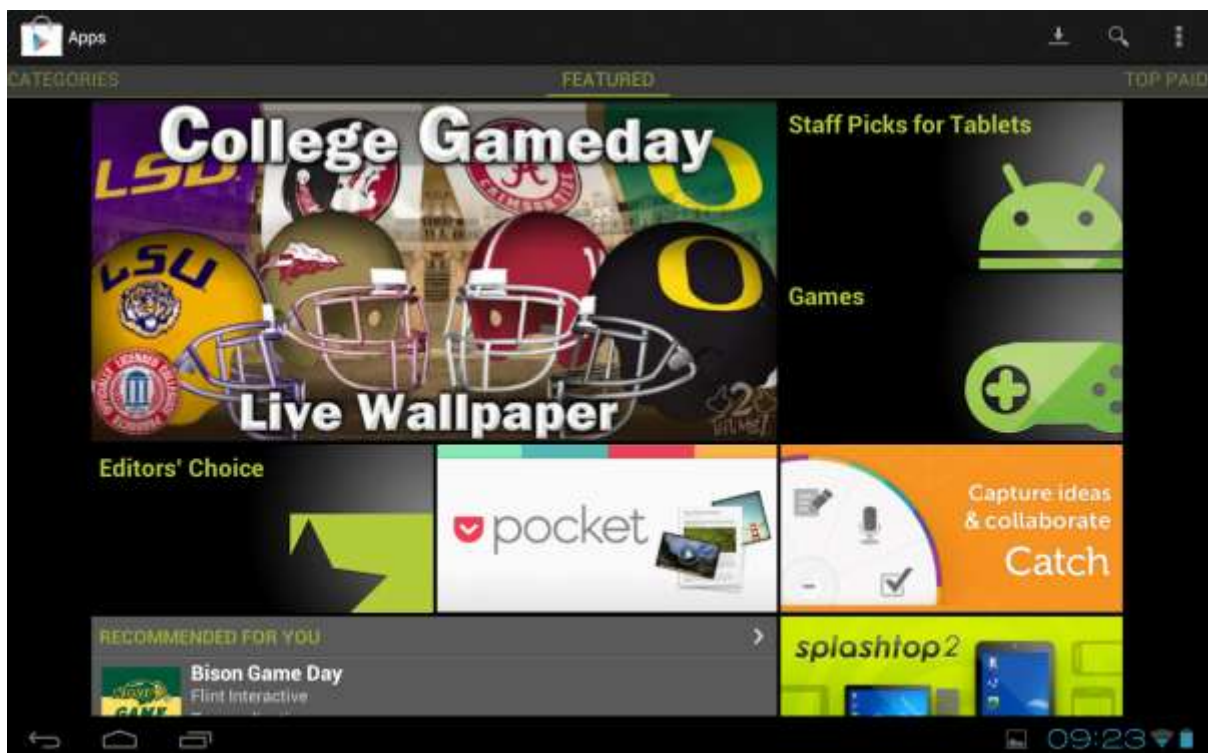

### How to uninstall Android programs

To uninstall the program:

1. Go to **Settings > Apps > Downloaded** menu
2. Tap on program you want to uninstall
3. Tap **Uninstall** and **OK** in popup menu.

**[Note]:** You can also use an alternative way of uninstallation: enter the list of applications, tap the application you'd like to uninstall, hold it and drag to the "Uninstall" icon on top of the display.

# 7. Typical applications

 
## 7

### 7.1 Music Player

Enjoy listening to songs and music on your MultiPad using the Music application. You need to copy music files to your storage card first to use the Music application to play music. To find out how to copy files, see ***“Copying files to and from the storage card”***. Supported audio formats see in MultiPad technical specifications above.





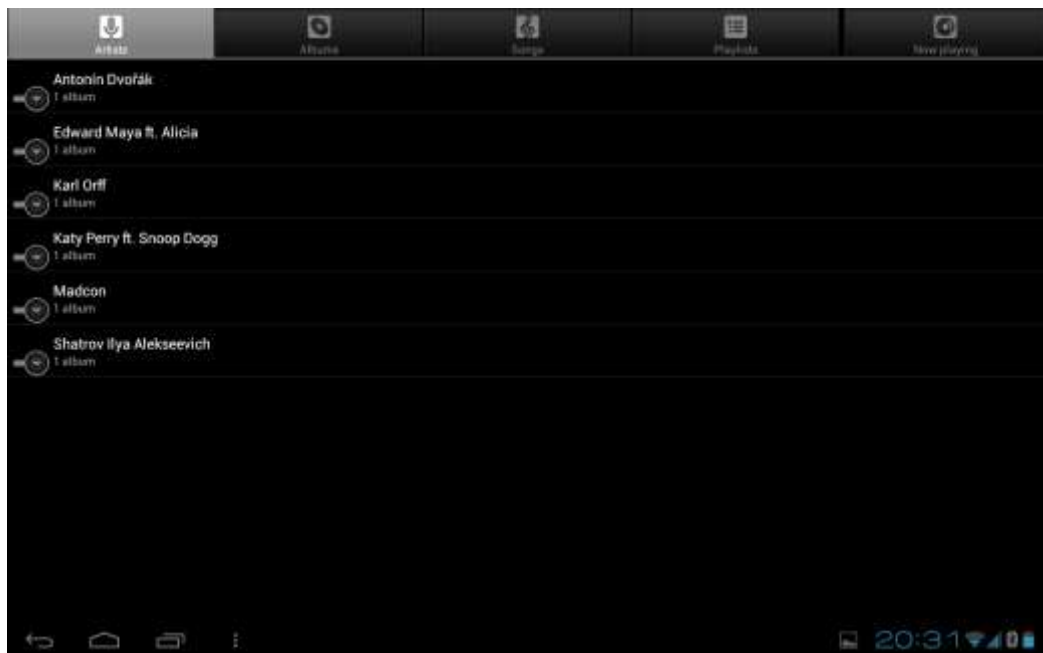



Tap the icon **Music** on the Home screen to enter the following screen:





Your music is organized into different categories such as Artists, Songs and Albums. Tap one of the category tabs to view a category.

Select a song in the playlist and tap on it to start playing as follows:

	Tap to go to the previous song.
	Tap to play, pause, or resume playing the song
	Tap to go to the next song
	Tap to go to the now playing list
	Tap to switch the following repeat modes: repeat all songs, repeat current song, do not repeat
	Tap to shuffle the current playlist.


When you are playing music and the screen turns off, you can control the music playback volume with hardware buttons Vol+ \ Vol-.

## 7.2 Video Player

 Tap the launcher icon  on the Home screen and then tap the Video player icon  to go to the following interface:



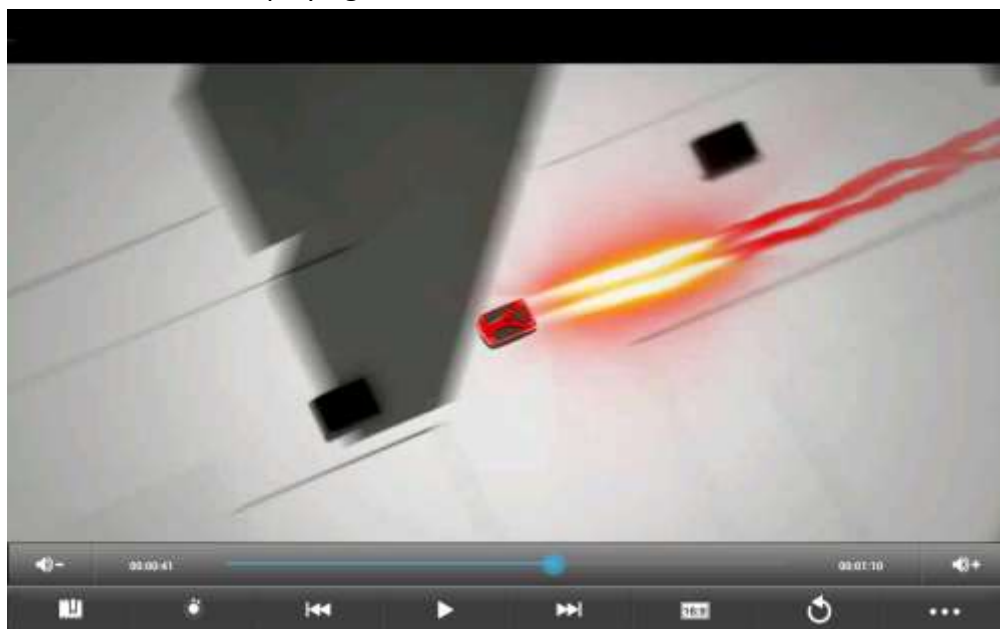

Double tap on a video file to start playing it.




To quit the video playing screen, touch the Back icon  in the status bar directly.

## 7.3 Gallery

 
You use Gallery to view pictures and play videos that you've taken with Camera, downloaded, or copied onto your SD card. You can perform basic editing tasks on pictures and set them as your wallpaper or contact picture. You can also share your pictures and videos with friends.

On the Home screen tap the launcher icon  and Gallery  icon after. Photos and videos are classified automatically for easy view. The gallery application will run and the interface is as follows:

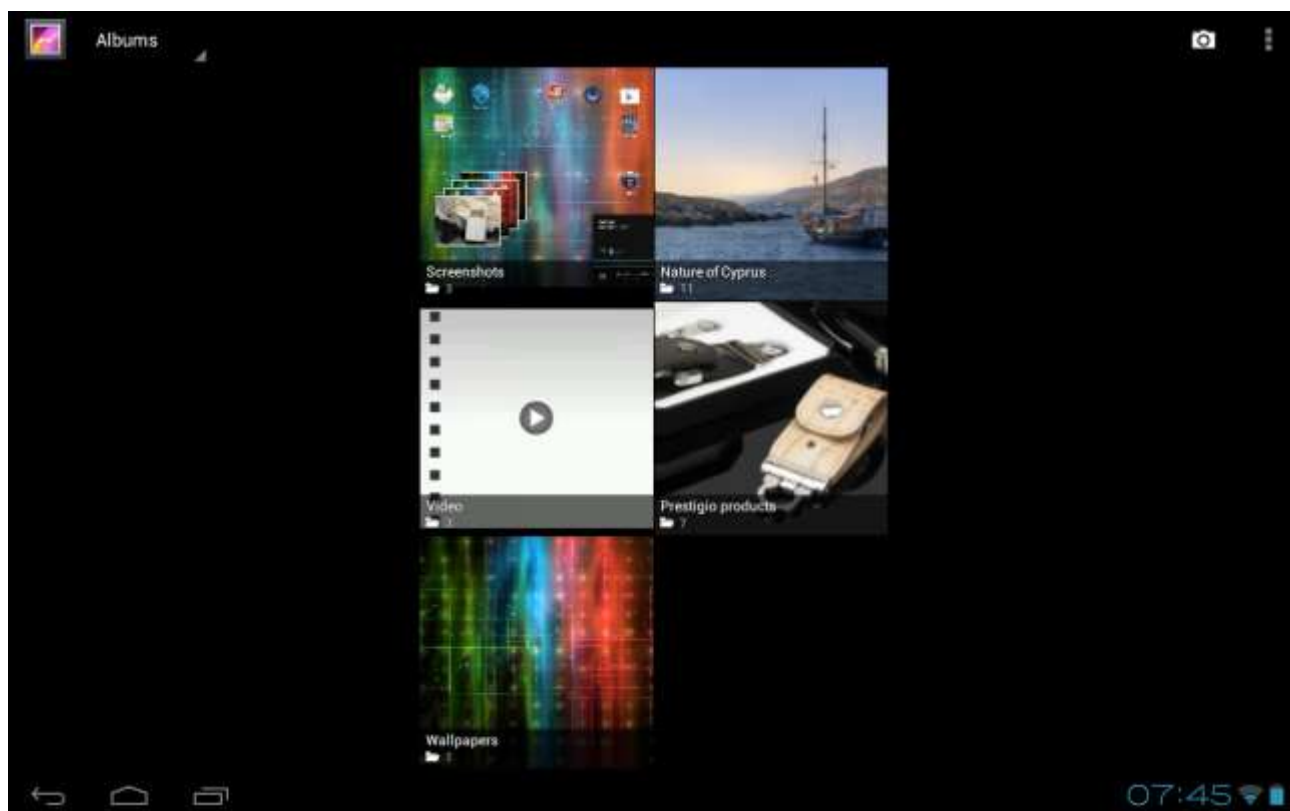


### Browse & edit pictures/photos


Tap an album to open it and view its contents;

 - this icon could be found on upper right corner of the screen; it allows you to browse all photos/pictures in slideshow mode.

Select a picture to view it in full screen mode; drag left or right to view the next or previous picture in the album; move your fingers inward/outward to zoom out/zoom in the selected photo/picture.

 - this button allows you to share it with friends via email, Twitter, Facebook etc.

Use delete icon  to delete the selected files.

Tap  to pop-up the following control menu:

 
**Slideshow** - starts a slide show of all pictures in the album;

**Edit** - to edit the selected picture. When the picture is zoomed in, drag the picture to view parts that are not in view. When the picture is zoomed to fit the window, drag left or right to view the next or previous

picture in the album.

**Rotate left** or **Rotate right** to rotate the picture/photo 90° anticlockwise or clockwise;

If you tap **Crop** icon the following cropping rectangle will appear on top of the picture/photo:

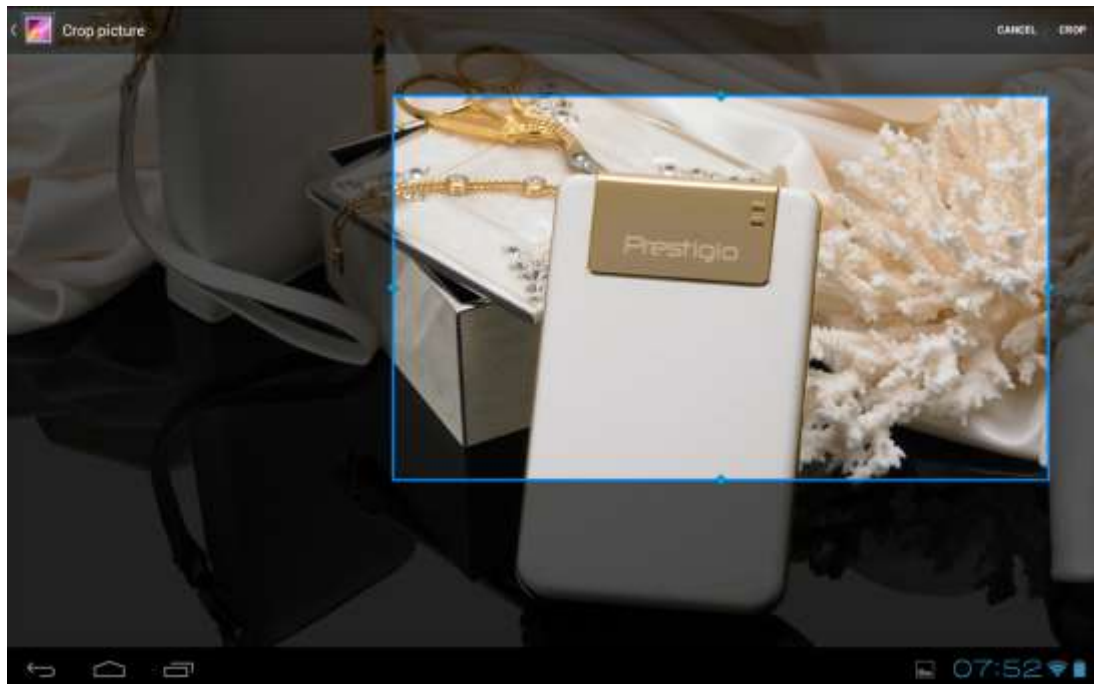

Drag from the inside of the cropping tool to move it; drag an edge of the cropping tool to resize it to any proportion; drag a corner of the cropping tool to resize it with a fixed proportions.

Tap **CROP** to save a copy of the picture as you cropped it. The original (not cropped) version remains on your SD card.

**Set picture as** to set the current picture/photo as wallpaper;

**Details** to see more details about the current picture/photo;

## 7.4 File Manager

### Introduction to File Manager



On the Home screen, tap the File Manager (Explorer) icon to open it as follows:






## File Management

In the above screen, you can navigate your storage and manage your files in the local disk and your storage card: copy/paste, delete, move and rename file and folder and send them via Bluetooth, mail or Skype.




Touch  to select multiple items in the list




## 7.5 Instant Messaging tools

You can download from Google Play and install chat tools on your device such as Skype, Fring, ICQ etc.

## 7.6 Emails

Tap the launcher icon  on the Home screen to display all icons, tap the Email/Gmail icon to run it.

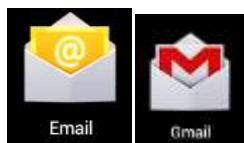 



With help of Prestigio MultiPad you can:


1. Setup mail accounts
2. Create new mails
3. Receive and send mails
4. Download or open the attached files

## 7.7 Camera

 The Camera app is a combination camera and camcorder that actually consists of two cameras, one facing back (toward you) and one facing forward (away from you). You may toggle between front and

rear cameras by touching this icon 


To take pictures and videos touch the Camera icon  on a Home or All Apps screen.

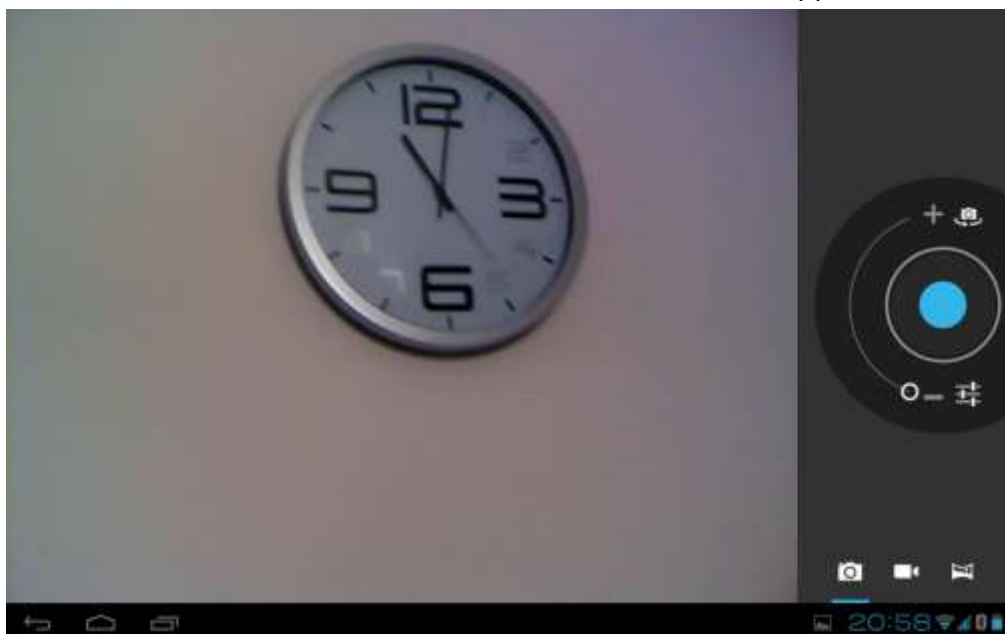








## 8. Prestigio preinstalled apps

# 8

Your new MultiPad contains several applications preinstalled by Prestigio to make using MultiPad more comfortable right from the box.


Following applications you can find in all apps list by touching  icon on the Home screen:

Application	Description
 eReader Prestigio	eReader Prestigio Prestigio branded bookstore. You can download and read Your favorite books here.
 Facebook	Facebook Stay always connected with Your friends and family with Facebook social network
 Twitter	Twitter Your favorite Twitter app. now always with You. Create and send Your messages from anywhere.
 OfficeSuite	OfficeSuite Increase Your productivity with mobile office application.
 Angry Birds Chess Free	Games And games, of course. Angry Birds – favorite game of millions! Classic Chess – game of all times.
 SugarSync	SugarSync Let Your important files synchronized from everywhere! It is a client for cloud storage service.
 Explorer	Explorer Manage Your files with this application.

# 9. Settings

# 9

Control and customize your device settings on the Settings screen.

To open the Settings screen, simply tap the Settings icon  on the Home screen.

 
You can scroll on the screen upwards/downwards to check the rest setting items.

## 9.1 Wireless & networks

Configure your device's wireless connections, e.g., Wi-Fi, Virtual Private Networks, or set the options for Portable hotspot.


### Wi-Fi

To turn on/off Wi-Fi, simply slide your finger rightward/leftward on the control bar.

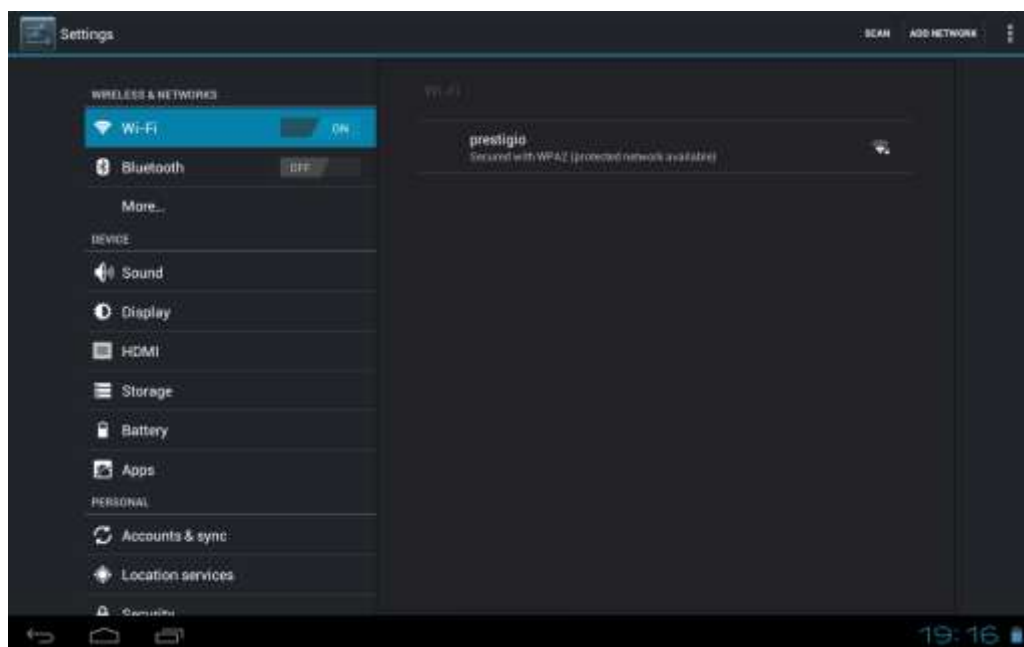

### Bluetooth

 Switch Bluetooth ON to pair your device with Bluetooth devices such as hands-free, keyboards or mobile phones

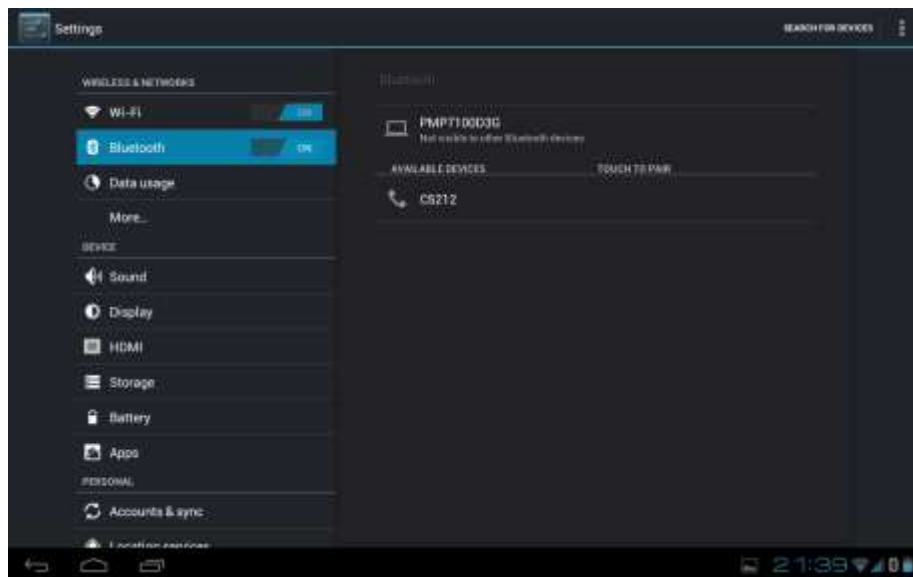

## Data Usage

Data usage menu lets you to control 2G/3G data connections, to monitor total usage by network type and application and then set limits if needed.



Data usage menu lets you to control 2G/3G data connections, to monitor total usage by network type

 
## More...

This menu allows you to switch on/off Airplane mode, setup Virtual Private Network (VPN) or enable WiFi hotspot. Wi-Fi Direct allows Android 4.0 devices with the appropriate hardware to connect directly to each other via Wi-Fi without an intermediate access point



## 9.2 Sound

Set the device and notification ring tones, volume adjust, system sounds.

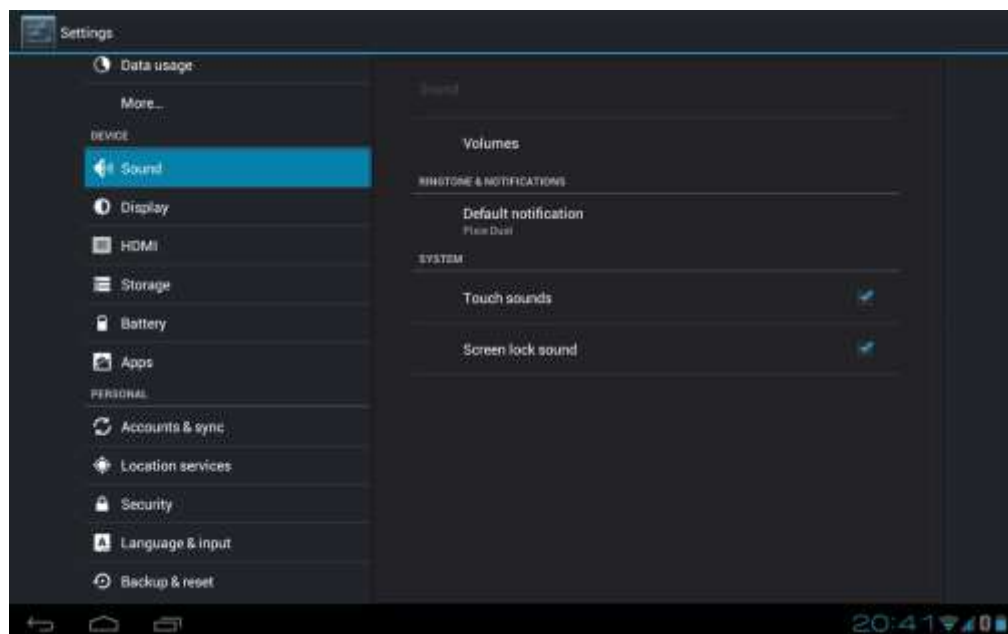

### Volume

To adjust the volume for media, ringtone, notification and alarms:

1. Tap Settings > Sound > Volumes;
2. Drag the control bar leftwards/rightwards to turn down/up the volume for media and notification;
3. Tap **OK**.

### Notification ringtone

To set a notification ringtone:

4. Tap Settings > Sound > Default notification
5. Tap a ringtone to listen it
6. Enable a ringtone as notification ringtone by tapping **OK**.

### Audible selection

To enable playing sound when making screen selection, simply check it.

## 9.3 Display

Set the screen brightness, auto-rotate option, wallpaper, screen timeout and font size.



### **Brightness**

Use the slider to set a brightness level you want at all times when using MultiPad. For the best battery performance, use the dimmest comfortable brightness.

### **Wallpaper**

Tap to select source of wallpaper and set wallpaper for the device.

### **Auto-rotate screen**

Check to enable/disable automatic switch of the orientation of the screen when you turn the device.

### **Sleep**

Open a dialog where you can set how long to wait after you tap the screen or touch a button before the screen darkens. For the best battery performance, use the shortest convenient timeout.

### **Font size**

Open a dialog where you can set font size.

## 9.4 HDMI Settings

In this menu you can turn on/off mini HDMI output, choose HDMI Resolution for your output device, adjust screen zoom on the output device by slider.



## 9.5 Storage

Check the usage condition of the storage space on the internal & external storage card. You can erase all data on the SD card and unmount the external SD card for safety removal.

Unmount the SD card: Tap Settings > Storage > Unmount SD card > OK.






## 9.6 Apps

Manage applications and installation of new programs.



### Apps

Open a list of all the applications and other software installed on your MultiPad, along with their sizes.

By default, only downloaded applications are shown, and they are sorted in alphabetical order. Touch  and tap **Sort by size** to display applications in order by size. Tap an application to open its Application Info screen.

 
To manage and /or remove uploaded applications, tap Settings > Apps > Downloaded.



### Running services



To check and control running service, tap Settings > Apps > Running.

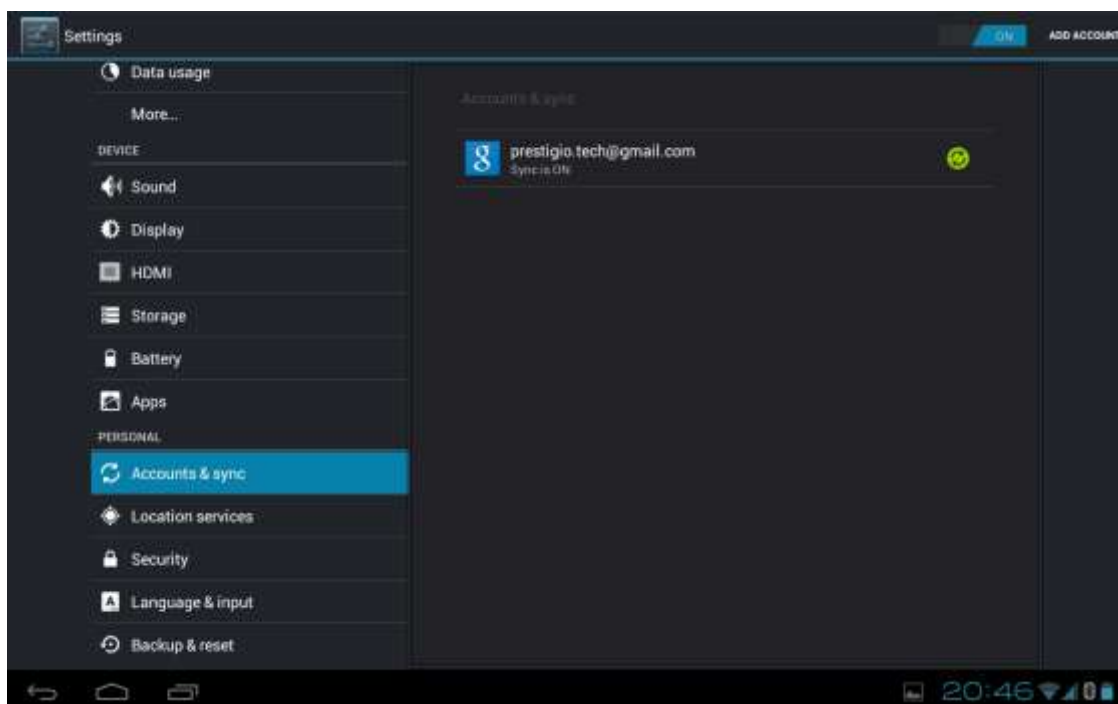
## 9.7 Accounts & Sync

Log in or out from your social network accounts, Google Account, and Exchange ActiveSync account. You can also manage synchronization and other settings for your accounts.



Tap  to turn on\off account sync . Tap **ADD ACCOUNT** in the above screen to add new accounts by following onscreen instructions. Tap the icon  to prompt the following screen to manage your accounts:

 Check  to turn on/off data synchronization, touch the menu icon  and then tap **Remove account** to remove the selected account from your device.

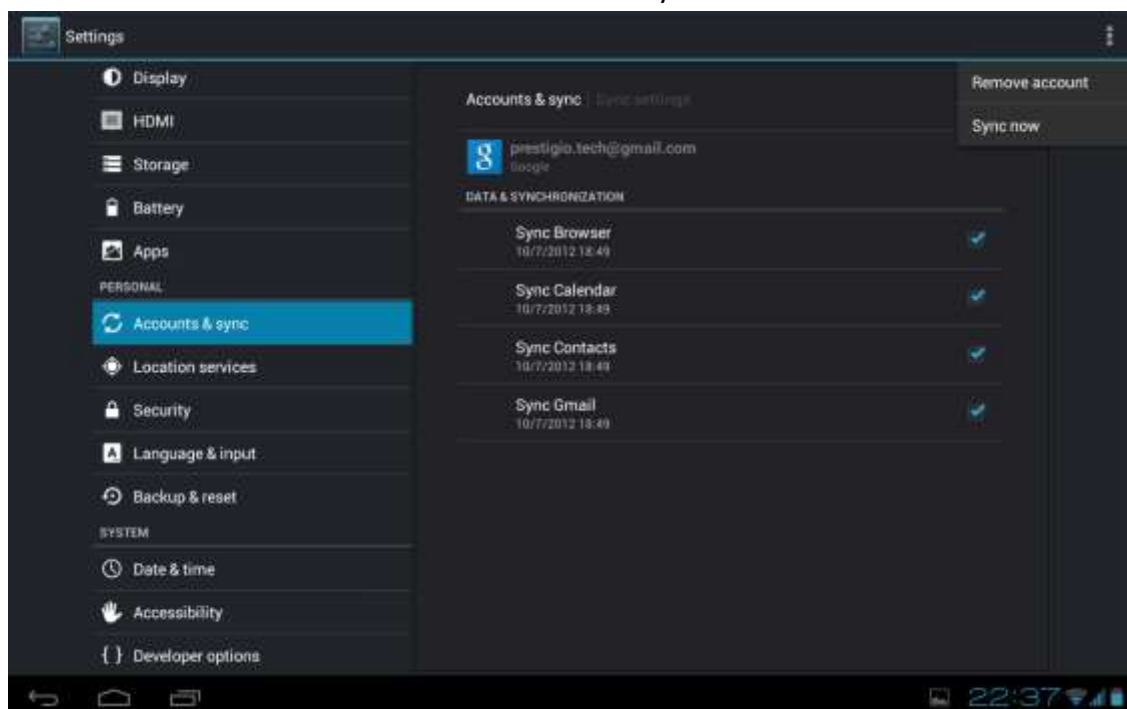


## 9.8 Location service

Enable applications using data from sources such as Wi-Fi and mobile networks to orientate your location and improve Google search results via check the options.

## 9.9 Security settings

 Set the screen lock mode and owner information, encrypt your device, manage password and administrate your device.

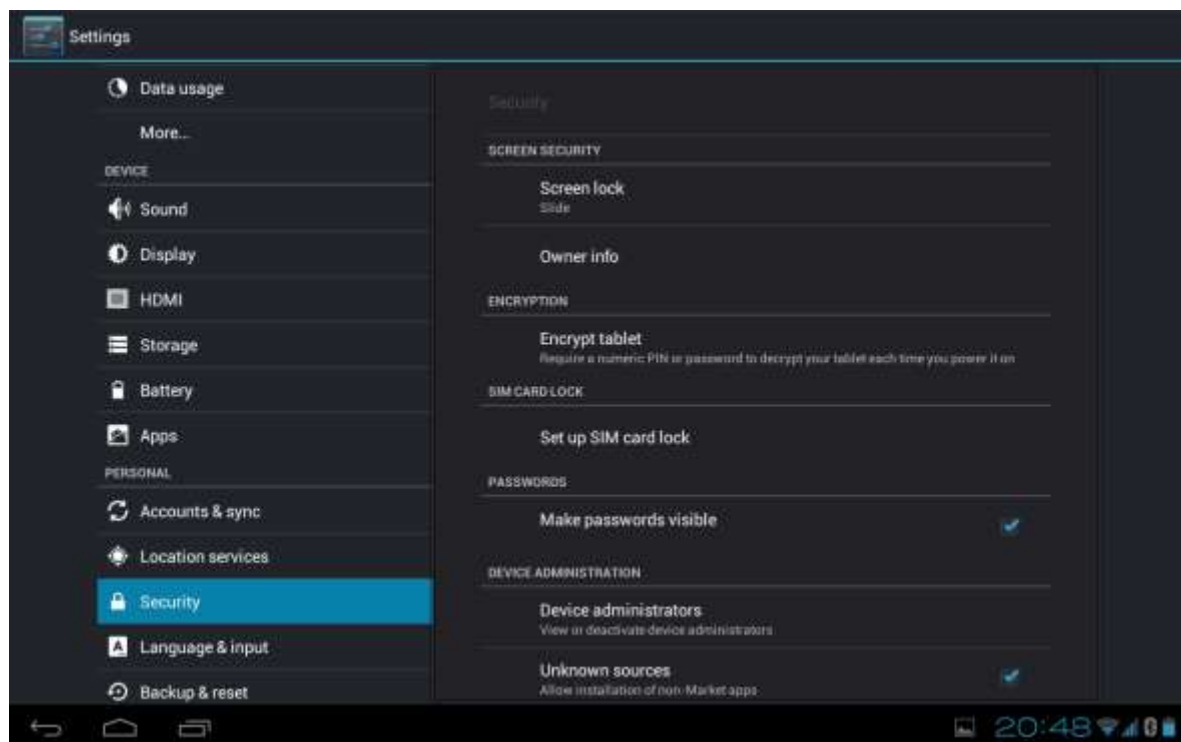

To personalize the screen lock mode of your device, tap **Settings > Security> Screen lock**

### Unknown sources

Check to permit installation of applications that you obtain from web sites, email, or other locations other than Google Play Store.

## 9.10 Language & input settings

Set the operating system language and region. You can also set onscreen keyboard options.

 
## 9.11 Backup & reset

You can enable or disable the automatic backup feature of the device and reset the device.


**[Note]:** after factory data reset, you personalizing settings and the installed third-party applications will be removed from your device. Before restoring default settings, it is suggested to backup data/applications you want and remove your storage card safely in case of data loss or damage during restoring factory default settings.

## 9.12 Date & Time setting

Set the date and time, time zone, and date or time format. To turn off auto time synchronization simple unmark it and you will be able to manually change time settings.

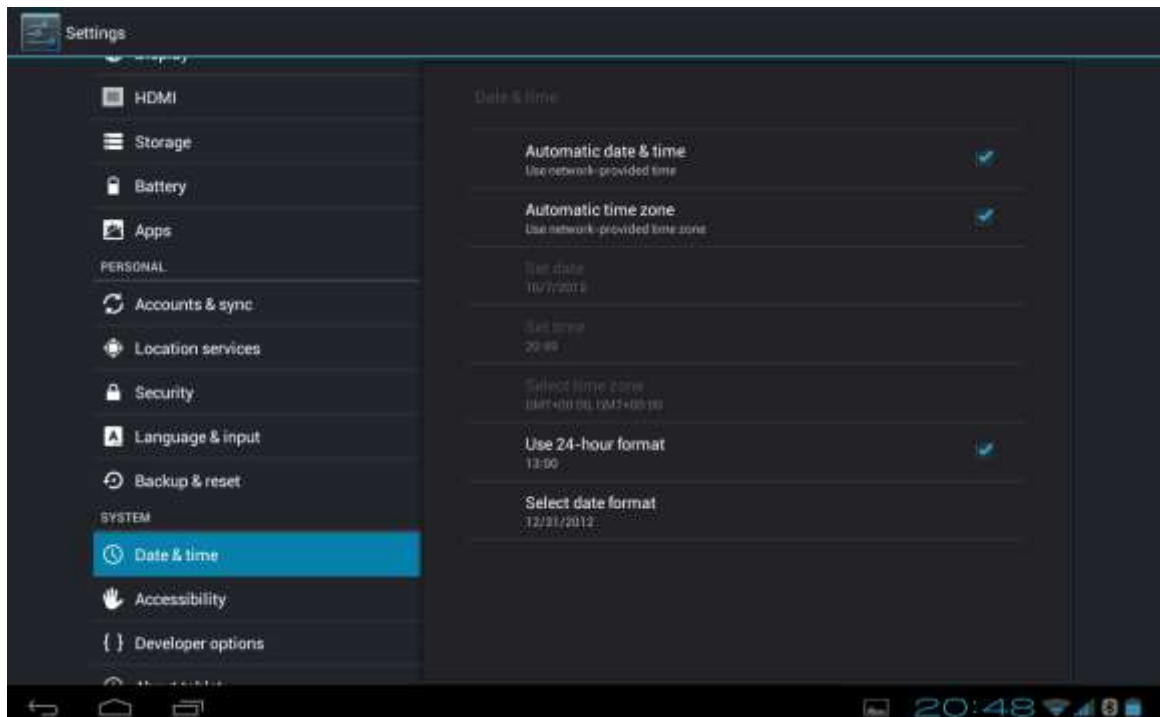

## 9.13 Accessibility

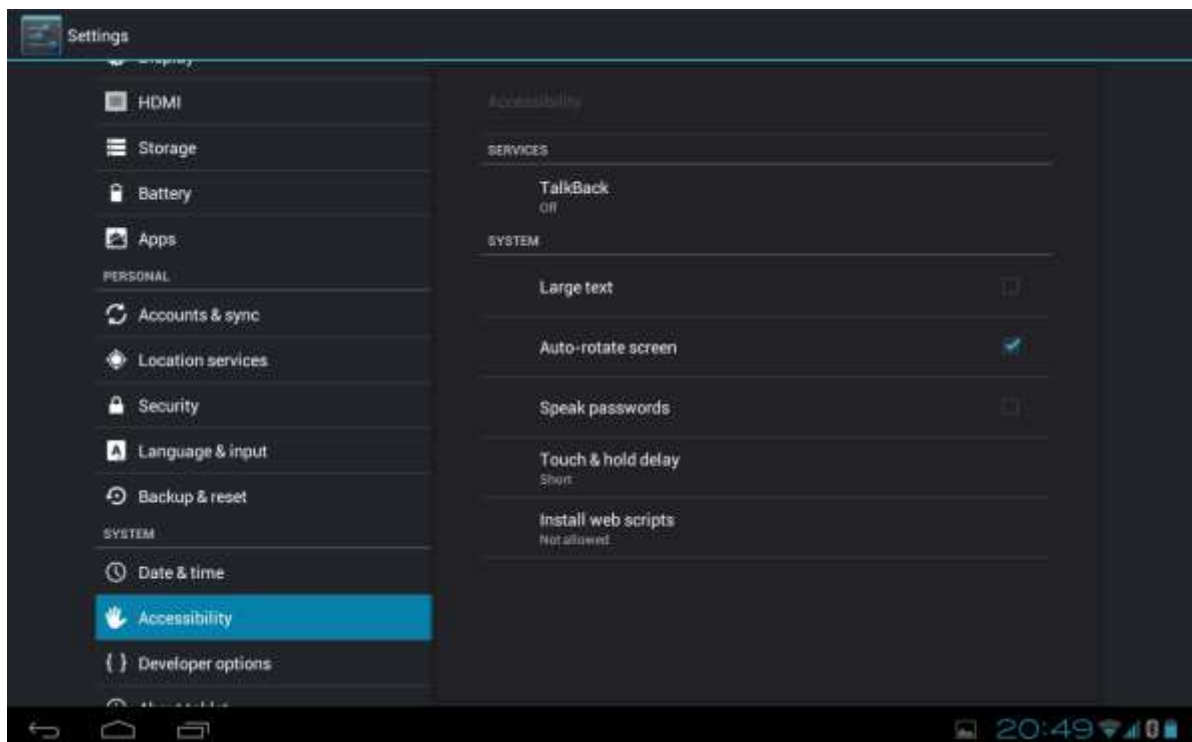 

**Speak passwords:** check to enable speak password

**Touch & hold delay:** 3 levels of delay when touch and hold widget or icon are available – Short, Medium, Long. It regulates the duration of object hold till further actions.

## 9.14 Developer options

You can set the USB debugging mode, select screen stay awake while charging and so on. And you can also manage user interface and apps.



**USB debugging:** Check to permit debugging tools on a computer to communicate with your MultiPad via a USB connection.

**Stay awake:** Check to prevent the screen from dimming and locking when the MultiPad is connected to a charger or to a USB device that provides power. Don't use this setting with a static image on the MultiPad for long periods of time, or the screen may be marked with that image.

**Allow mock locations:** Check to permit a development tool on a computer to control where the MultiPad believes it is located, rather than using the internal methods for this purpose.

## 9.15 About tablet

View the device status such as the network type, battery power level, and network name. You can also check the battery use of individual applications or view the legal information and firmware version (Build number; symbols vx.x.x) of your MultiPad.

# 10. Troubleshooting

# 10

## 10.1 Forced shutdown

Touch the Power Button for about 8 seconds and the device will be forced shutdown. This operation might cause data loss though, so please backup important information regularly.

## 10.2 Restore default settings

To restore the factory default settings, you can tap Settings > Backup & reset> Factory data reset.

**Warning:** data of your Google account, your personalized settings, and installed applications will be removed from your device once you execute factory default settings, so please make a careful decision whether to restore default settings. Before restoring default settings, it is suggested to backup data/applications you want.

## 10.3 System updating

After system update/upgrade, it may occur that the installed third-party applications cannot run or there is data loss or damage to the apps. This is normal phenomena rather than system fault. You just need to download and install the third-party applications again into the device. It is recommended to backup data of the third-party applications before system update/upgrade.

# 11. Glossary

# 11

**Android 4.0 (Ice Cream Sandwich)** - operating system for Tablet PCs and smartphones based on Linux kernel;

**Google Play Store** – online store with software for Android OS;

**Google Account** - pre registered user account for having access to the Google branded services and registration of MultiPad;

**MultiPad** – Prestigio trademark for Tablet PC devices;

**Gmail** – Google branded e-mail client;

**Widgets** – simple programs on the Tablet PC desktop for showing different information or shortcuts to connected installed software.